



Standard Sheet Metal Works LLC,

Quality Engineering * Manufacturing


E-Z Joint Connector ^{Pat. Pend.} *Installation* Easy Step Instructions

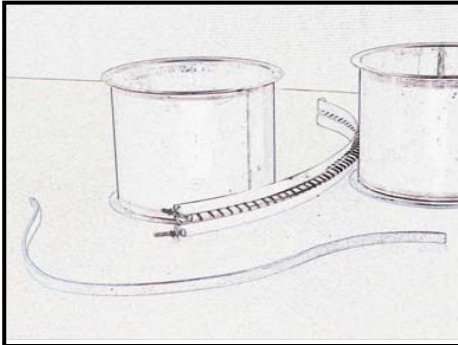


Step 1
Precut Gasket to approximate length +2".

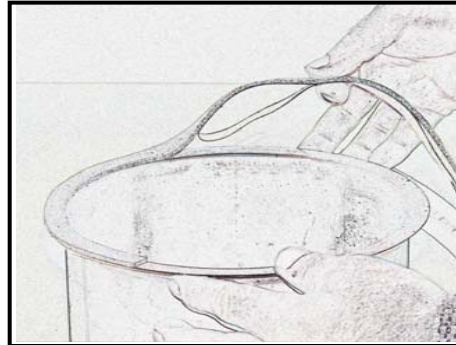


Step 2
Apply Gasket to face of flange.

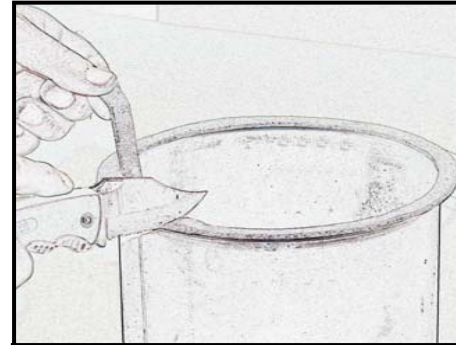


Step 3
Trim excess Gasket Material.

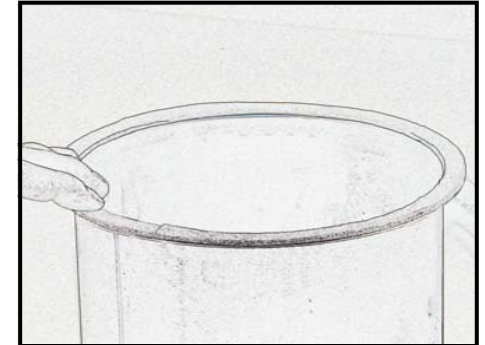


Step 4
Smooth and inspect Gasket material to insure good seal.

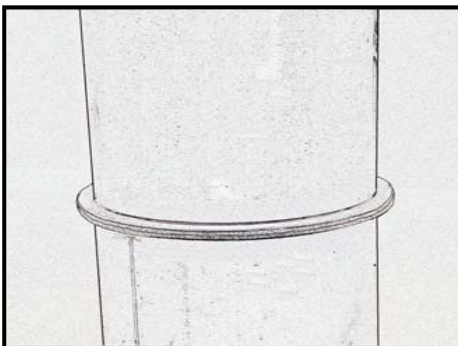


Step 5
Align Pipe Joints and plan on band joint to be located on top of horizontal runs.

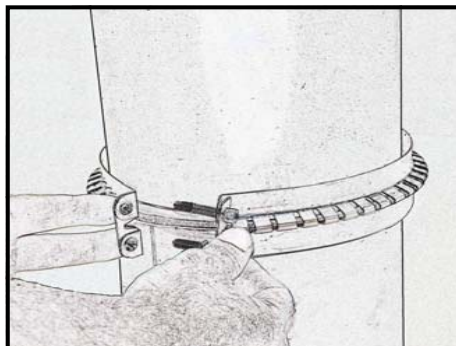

Step 6
Apply E-Z Band to 1/2" Flanges.

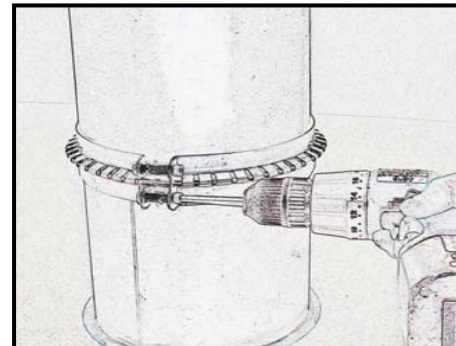

Step 7
Tighten E-Z Band to compress Gasket.

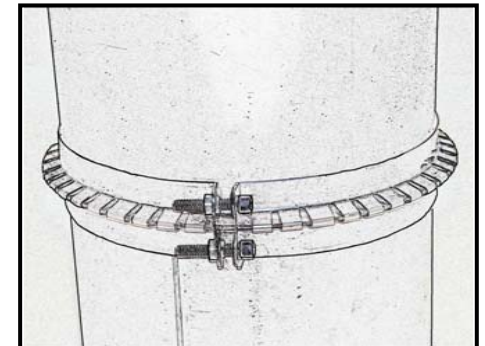

Step 8
Visually inspect to confirm quality of joint.